


INSTALLATION INSTRUCTIONS

OPTICAL TERMININATION OUTLET

EDITION 2nd
DATE AUGUST 2026

These instructions serve as a guide for the specialist installer.
Observe the local safety regulations during installation..

GRUPOELECTROSON // ELECTROSON TELECOMUNICACIÓN
C/ Electricistas 1, Pol Industrial Pinares Llanos 28670 Villaviciosa de Odón.
Madrid. ESPAÑA T// +34 91 616 39 63
www.electrosonteleco.com

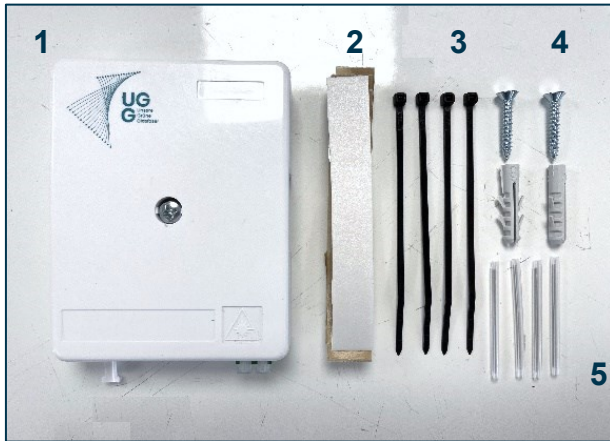

MATERIALES:



1. OTO (with adaptors, splice tray and pigtails*).
2. FOAM TAPE
3. PLASTIC TIES
4. WALL MOUNTING KIT
5. SMOVES

***NOTE:** According to the network standards and cable construction, the kit contents may be different from the one described in this installation instructions.


INSTALLATION (optical network finished in OTO)



1. Loosen the screw holding the cover; then cut the entry of the box as shown in the picture.

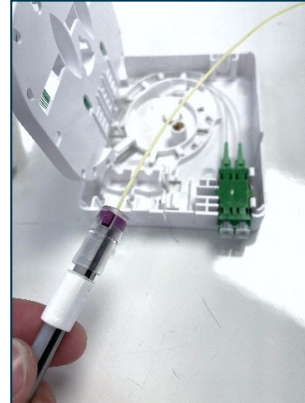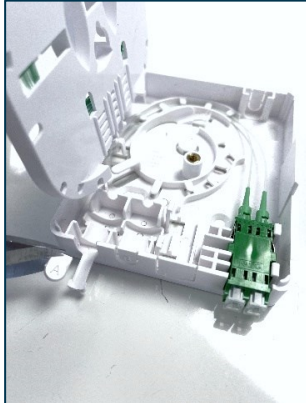

2. Make one loop of FOAM tape over the tube, then retain the tube with the supplied plastic tie and fix it into position.

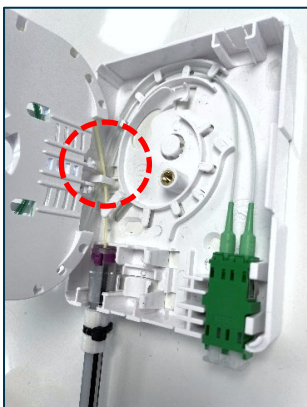


3. Guide the fibre into the tray. The fibre must pass through the lower flange of the tray. Fuse the input fibres with the pigtails; store the excess fibre in the tray.






4. Place and screw on the cover.

INSTALLATION (optical network finished in OTB by fusion splices)

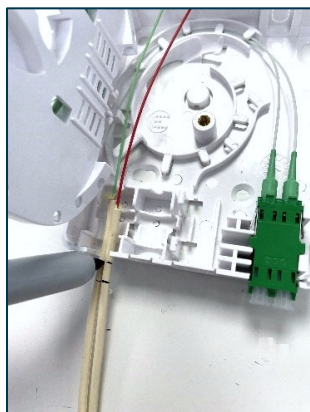


1. Mark the position where the foam tape will go. Make one loop of FOAM tape over the cables, then retain with the supplied plastic tie outside of the box.

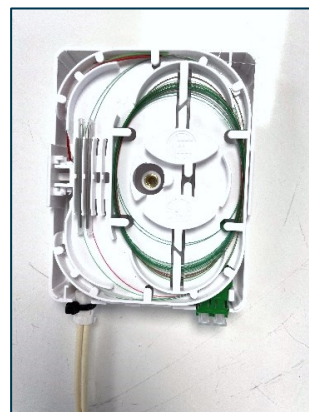
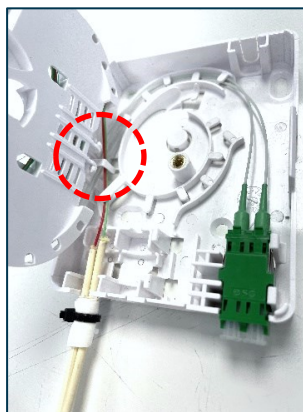
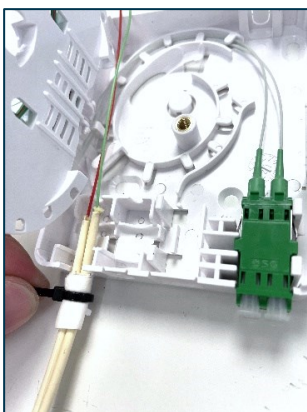


2. Guide the fibre into the tray. The fibre must pass through the lower flange of the tray. Fuse the input fibres with the pigtails; store the excess fibre in the tray as shown in the picture. Place and screw on the cover.

INSTALLATION (optical network finished in OTB by patchcord)

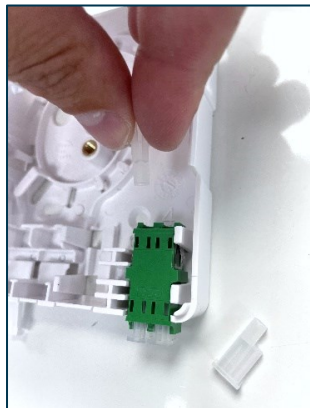


1. Remove the protectives caps from the adapters, connect the patchcord cable as shown in the picture.

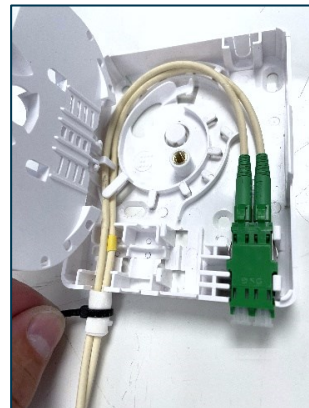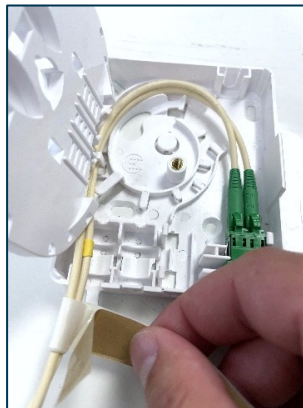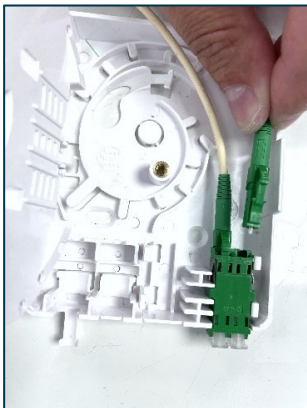

2. Guide the patchcord out of the box as shown in the picture. Make one loop of FOAM tape over the cables, then retain with the supplied plastic tie outside of the box. Place and screw on the cover.

INSTALLATION PATCHCORD TO ONT

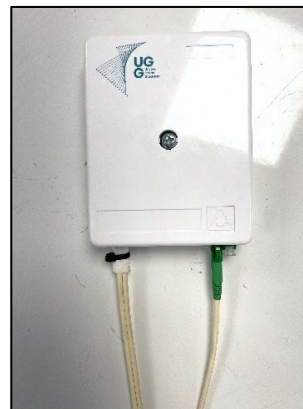

1. Remove the protective cap from the adaptor, connect the patchcord as shown in the picture. Connect the other end of the patchcord to the ONT.